

INSTALLATION GUIDE

terina



Effective June 2018



TERINA INSTALLATION GUIDE

Flip Top Tables



Required Tools


Safety Glasses



Drill




Measuring Tape




Wrench




Allenkeys



Phillips Bit




Spacer Block




3 9/16" x 1 7/8" (included)

Pre Assembled Components


Legs

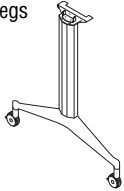

Cross Beam


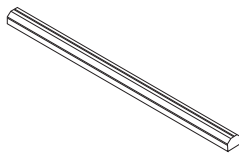


Cable Release/Support Beams

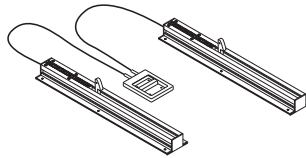


Legs


1. Connect the leg to cross beam.

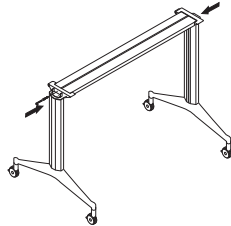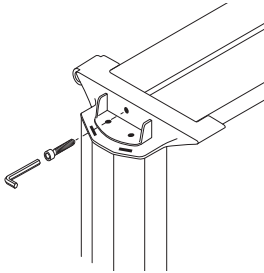

2. Snap on black plastic cover to conceal connection.

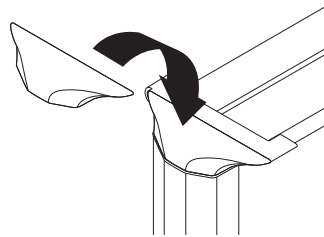


3. Snap support block into channel on top of cross beam.



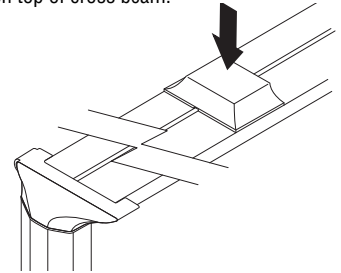


Pivot Bracket

4. Remove end cap from the end of the support beam.



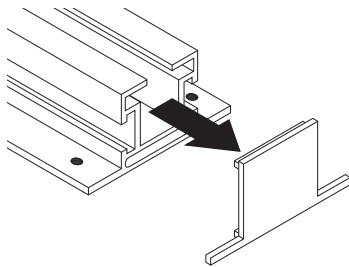


5. Ensure pivot bracket is installed 3 9/16" from the end of the extrusion. Replace the end cap.

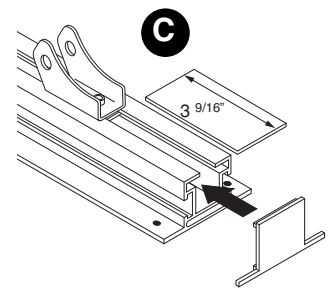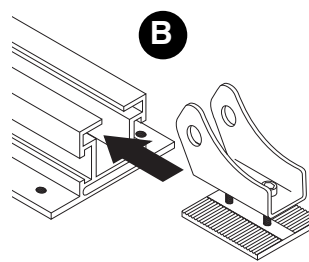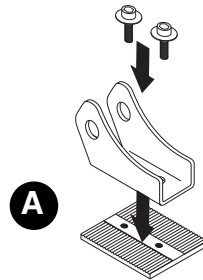


6. Connect the base to the support beam.

Insure that black nylon washers (A) are installed between the pivot bracket and the assembly.

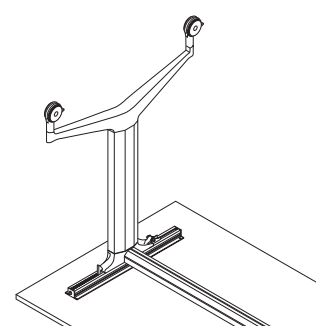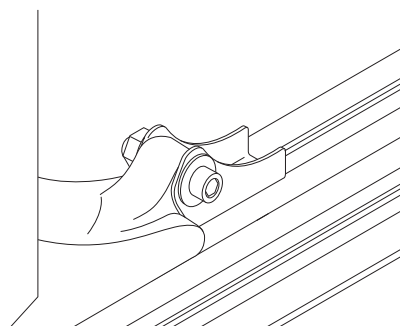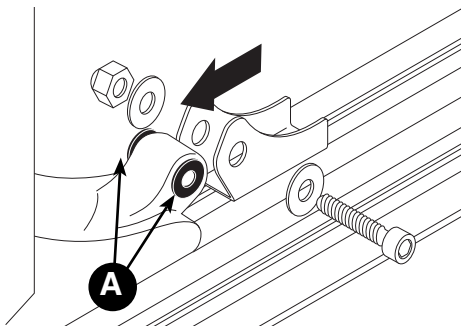


Flip top table top


7. Connect the beams to the table top using the pilot holes provided.

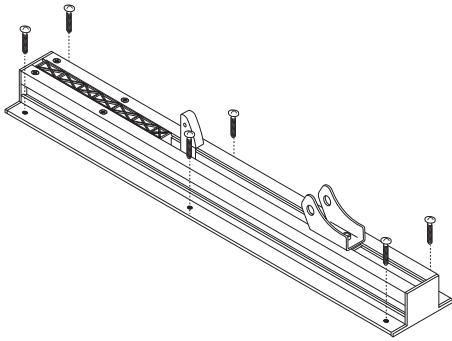

8. Position cable release mechanism in the center of the table 1" from the user edge and screw into the underside of the top.

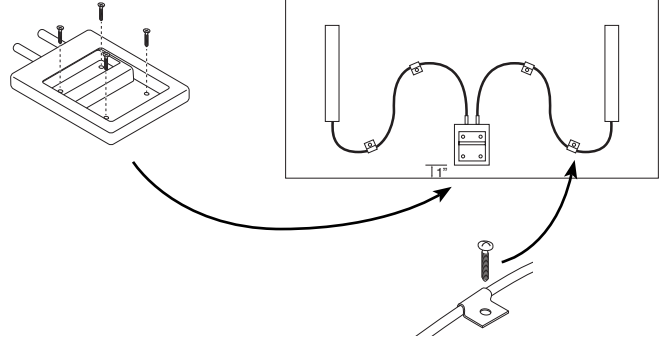


9. Secure the cables to underside of the top with the provided brackets (4).

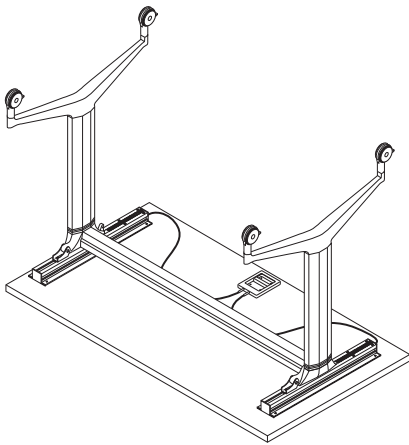


TERINA INSTALLATION GUIDE

Optional Modesty Panel

1. Remove end cap and insert bolt into the inside slot. Use the rubber mallet to secure the end cap in original position.

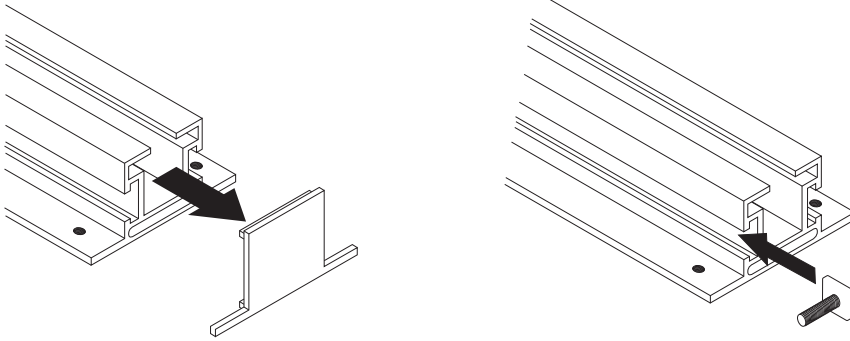


2. Use the guide to position the bolt with washer and nut $1\frac{7}{8}$ " from the end. Tighten nut in place.

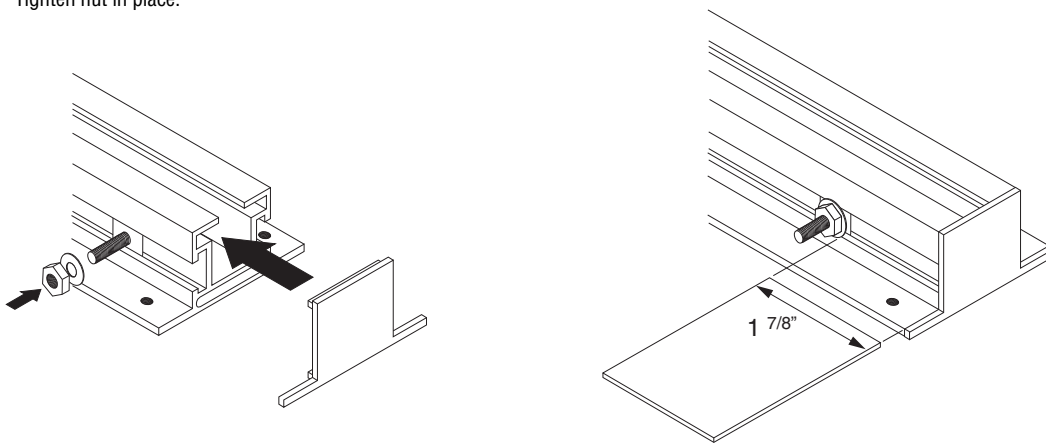


3. Connect the modesty bracket as shown.

Insure that nylon washers (A) are installed on either side of the modesty bracket.

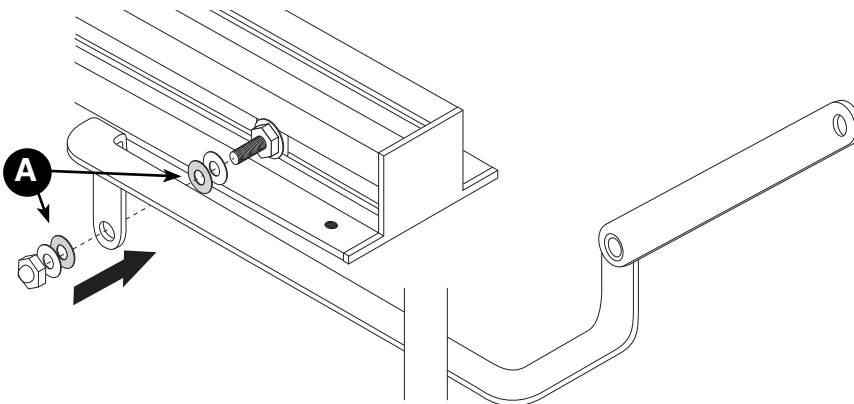


Flip top tables

4. Unbolt the pre-installed foot from its column. Insert the slotted bolt in the channel. Reconnect the foot and column. Tighten the bolt with washer and nut 4 7/8" from the bottom at the foot connection.

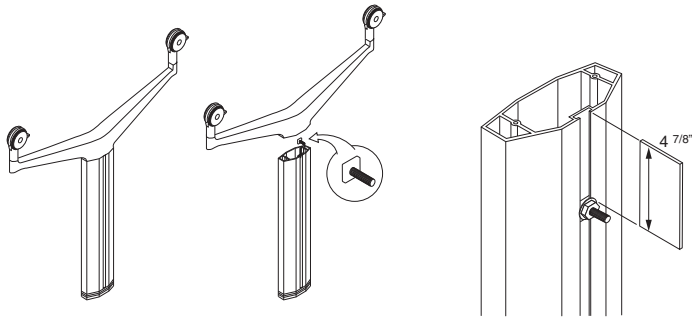

5. Connect the modesty panel bracket as shown.

Insure that nylon washers (A) are installed on either side of the modesty bracket.

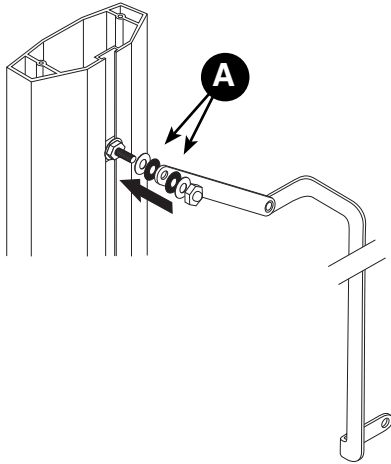

6. Attach modesty panel. Using guide block position panel 1 7/8" below support beam and screw in place.

